


3D gauze

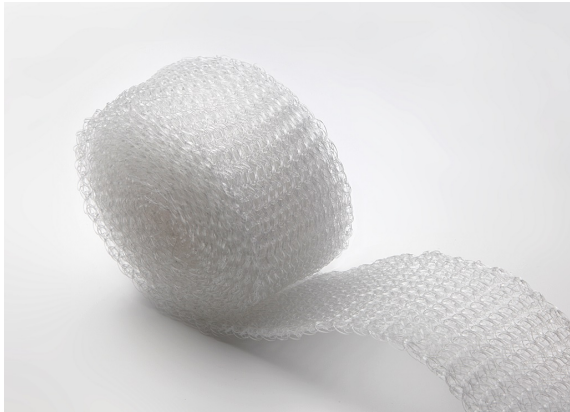

Used for making taped resin injection joints. The gauze is used to create sufficient insulation distance between the conducting parts within the injection joint.

Eigenschaften

- Contributed to a proper flow of the resin into the joint
- White colour, for a visible contrast with the resin
- Not hygroscopic
- 3D structure
- Not sharp to the hands

Spezifikationen

Material	polypropylene
Thickness	2,25mm
Width	50mm
Length	2,3m
Mesh structure	3D warp knit

Produkte

Art.nr.	Artikelname	Bestelleinheit
80479	FiloSlim 3D Gewebematte 5cm x 2,3m	75 Stück / Karton