


3D gauze

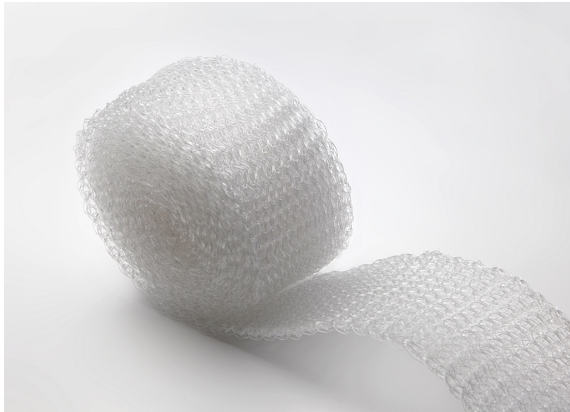

Used for making taped resin injection joints. The gauze is used to create sufficient insulation distance between the conducting parts within the injection joint.

Eigenschaften

- Contributed to a proper flow of the resin into the joint
- White colour, for a visible contrast with the resin
- Not hygroscopic
- 3D structure
- Not sharp to the hands

Spezifikationen

| | |
|----------------|---------------|
| Material | polypropylene |
| Thickness | 2,25mm |
| Width | 50mm |
| Length | 2,3m |
| Mesh structure | 3D warp knit |

Produkte

| Art.nr. | Artikelname | Bestelleinheit |
|---------|------------------------------------|-------------------|
| 80479 | FiloSlim 3D Gewebematte 5cm x 2,3m | 75 Stück / Karton |